


## 2. SETUP

# 1. GENERAL SETTINGS

Used for language selection and the on/off settings of operation sounds and automatic screen change, etc.


- 1 Press the “SETUP” button.

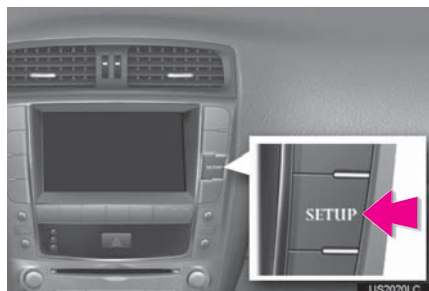

- 2 Touch “General”.






- 3 Touch the items to be set.

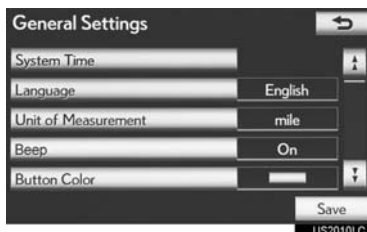

- 4 Touch “Save”.

## SCREENS FOR GENERAL SETTINGS

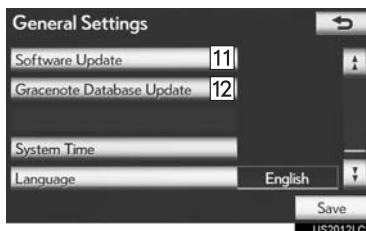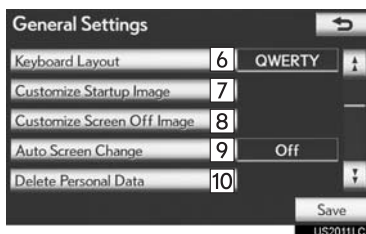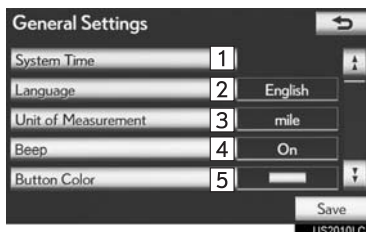

- On this screen, the following functions can be performed:


No.	Function
1	Touch to change the time zone and select <b>"On"</b> or <b>"Off"</b> for daylight saving time. (See "SYSTEM TIME SETTINGS" on page 47.)
2	Touch to change the language. (See "SELECTING A LANGUAGE" on page 49.)
3	Touch to change the distance unit. (See "UNIT OF MEASUREMENT" on page 49.)
4	Touch to turn the sound beeps <b>"On"</b> or <b>"Off"</b> .
5	Touch to change the screen button color. (See "SELECTING A BUTTON COLOR" on page 50.)
6	Touch to change the keyboard layout. (See "SELECTING A KEYBOARD LAYOUT" on page 50.)
7	Touch to customize the startup image. (See "CHANGING THE STARTUP IMAGE" on page 51.)
8	Touch to customize the screen off image. (See "CHANGING THE SCREEN OFF IMAGE" on page 53.)
9	Touch to set automatic screen changes from the audio/air conditioning control screen to the previous screen to <b>"On"</b> or <b>"Off"</b> . If <b>"On"</b> is selected, the screen will automatically return to the previous screen from the audio/air conditioning control screen after no operations have been performed for 20 seconds.

No.	Function
10	Touch to delete personal data. (See "DELETING PERSONAL DATA" on page 54.)
11	Touch to update program versions. For details, contact your Lexus dealer.
12	Touch to update gracenote database versions. For details, contact your Lexus dealer.


## SYSTEM TIME SETTINGS

Used for changing time zones and the on/off settings of daylight saving time.

- 1 Press the **"SETUP"** button.
- 2 Touch **"General"** on the "Setup" screen.
- 3 Touch **"System Time"**.

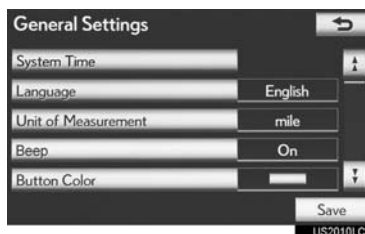

## 4 Touch the items to be set.

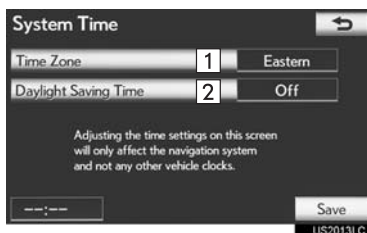

- On this screen, the following functions can be performed:


No.	Function
1	Touch to change the time zone. (See "TIME ZONE" on page 48.)
2	Touch to select "On" or "Off" for daylight saving time.

## 5 Touch "Save".


## TIME ZONE

A time zone can be selected and GMT can be set.


- 1 Press the "SETUP" button.
- 2 Touch "General" on the "Setup" screen.
- 3 Touch "System Time" on the "General Settings" screen.
- 4 Touch "Time Zone".

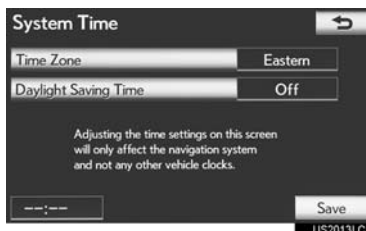

## 5 Touch the desired time zone.

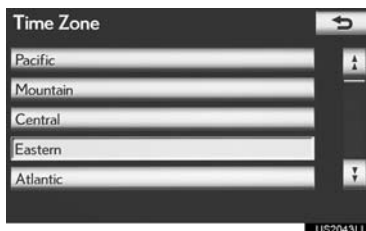

- If "Other" is touched, the zone can be adjusted manually. Touch "+" or "-" to adjust the time zone and then touch "OK".

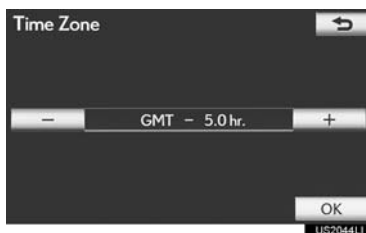


## 6 Touch "Save".


## SELECTING A LANGUAGE

The language can be changed.

- 1 Press the "SETUP" button.
- 2 Touch "General" on the "Setup" screen.
- 3 Touch "Language".

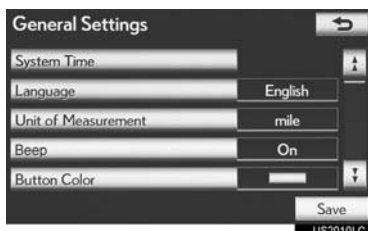

- 4 Touch the desired screen button.

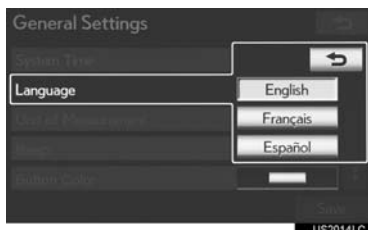


- 5 Touch "Yes".
  - The previous screen will be displayed.
- 6 Touch "Save".


## UNIT OF MEASUREMENT

Distance unit can be changed.

- 1 Press the "SETUP" button.
- 2 Touch "General" on the "Setup" screen.
- 3 Touch "Unit of Measurement".

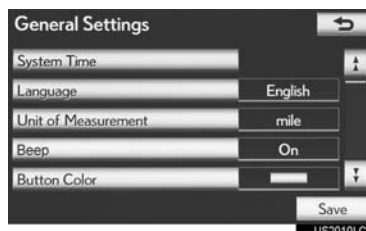

- 4 Touch "km" or "mile".

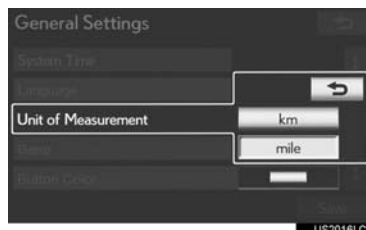


- The previous screen will be displayed.
- 5 Touch "Save".

- This function is available only in English or Spanish. To change language, see "SELECTING A LANGUAGE" on page 49.


## SELECTING A BUTTON COLOR

The color of the screen buttons can be changed.

- 1 Press the **"SETUP"** button.
- 2 Touch **"General"** on the "Setup" screen.
- 3 Touch **"Button Color"**.

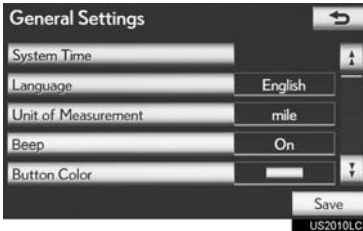

- 4 Touch the desired screen button color.

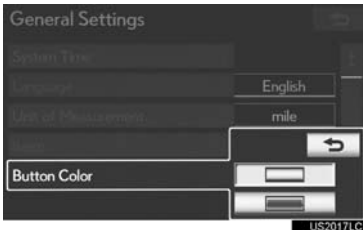


● The previous screen will be displayed.

- 5 Touch **"Save"**.


## SELECTING A KEYBOARD LAYOUT

Keyboard layout can be changed.

- 1 Press the **"SETUP"** button.
- 2 Touch **"General"** on the "Setup" screen.
- 3 Touch **"Keyboard Layout"**.

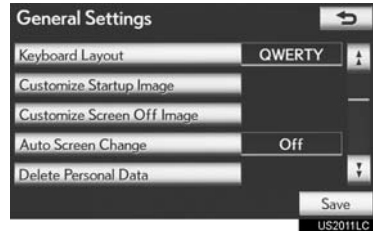

- 4 Touch **"ABC"** or **"QWERTY"** of "Key-board Layout" to change the keyboard layout.

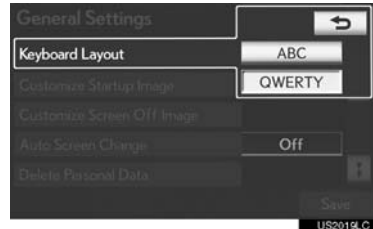


● The previous screen will be displayed.


- 5 Touch **"Save"**.

## ■ LAYOUT TYPE

### ► “ABC” type

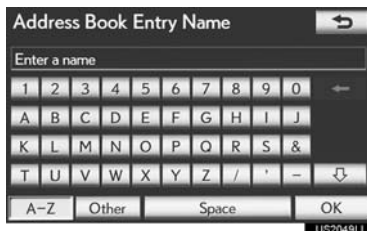

### ► “QWERTY” type

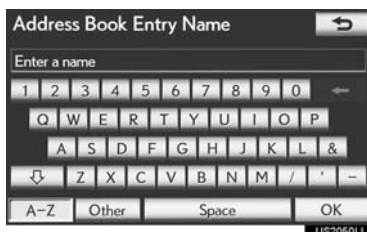

## CHANGING THE STARTUP IMAGE

When the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode, the initial screen will be displayed.


An image can be copied from a USB memory and used as the startup image. (For information regarding the startup image, see “INITIAL SCREEN” on page 28.)

### INFORMATION

- When saving the images to a USB, name the folder that the startup image is saved to “StartupImage” and name the folder that the screen off image is saved to “DisplayOffImage”. If these folder names are not used, the navigation system cannot download the images. (The folder names are case sensitive.)
- The images file extension is JPG or JPEG.
- The images file name, including the file extension, can be up to 32 characters.
- Image files of 10 MB or less can be saved.
- Up to 3 images can be downloaded.


## ■ TRANSFERRING DATA

- 1 Open the cover and connect a USB memory.

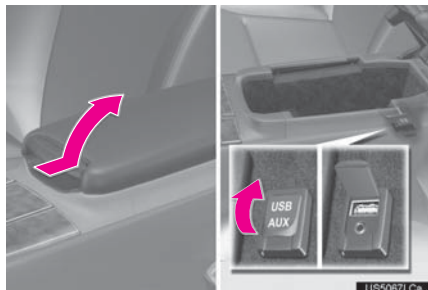

- Turn on the power of the USB memory if it is not turned on.

- 2 Close the console box.
- 3 Press the "SETUP" button.
- 4 Touch "General" on the "Setup" screen.
- 5 Touch "Customize Startup Image".

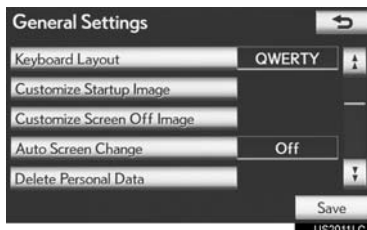

- 6 Touch "Transfer".



- 7 Touch "Yes".

## ■ SETTING THE STARTUP IMAGE

- 1 Press the "SETUP" button.
- 2 Touch "General" on the "Setup" screen.
- 3 Touch "Customize Startup Image" on the "General Settings" screen.
- 4 Touch the desired image.



- 5 Touch "Save".

## ■ DELETING TRANSFERRED IMAGES

- 1 Press the "SETUP" button.
- 2 Touch "General" on the "Setup" screen.
- 3 Touch "Customize Startup Image" on the "General Settings" screen.
- 4 Touch "Delete All".




- 5 Touch "Yes".

## CHANGING THE SCREEN OFF IMAGE

Touch **"Screen Off"** to turn off the screen. An image can be copied from a USB memory and can be set to display when **"Screen Off"** is touched. (For more information on **"Screen Off"**, see **"SCREEN ADJUSTMENT"** on page 33.)


## TRANSFERRING DATA

- 1 Open the cover and connect a USB memory.

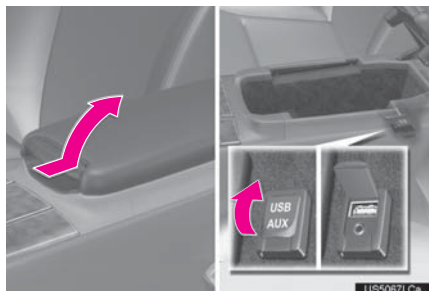

- Turn on the power of the USB memory if it is not turned on.

- 2 Close the console box.
- 3 Press the **"SETUP"** button.
- 4 Touch **"General"** on the "Setup" screen.
- 5 Touch **"Customize Screen Off Image"**.

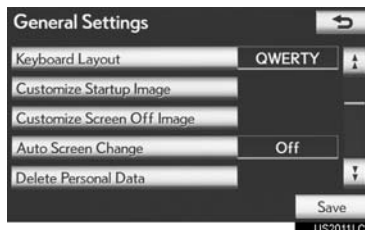

- 6 Touch **"Transfer"**.



- 7 Touch **"Yes"**.



## ■ SETTING THE SCREEN OFF IMAGE


- 1 Press the “**SETUP**” button.
- 2 Touch “**General**” on the “Setup” screen.
- 3 Touch “**Customize Screen Off Image**” on the “General Settings” screen.
- 4 Touch the desired image.



- 5 Touch “**Save**”.

## ■ DELETING TRANSFERRED IMAGES


- 1 Press the “**SETUP**” button.
- 2 Touch “**General**” on the “Setup” screen.
- 3 Touch “**Customize Screen Off Image**” on the “General Settings” screen.
- 4 Touch “**Delete All**”.

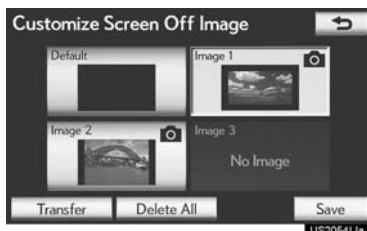

- 5 Touch “**Yes**”.

## DELETING PERSONAL DATA

- 1 Press the “**SETUP**” button.
- 2 Touch “**General**” on the “Setup” screen.
- 3 Touch “**Delete Personal Data**”.

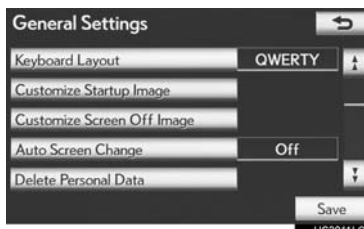

- 4 Touch “**Delete**”.



- 5 Touch “**Yes**”.

- The following personal data can be deleted or returned to their default settings:

- Maintenance conditions
- Maintenance information off setting
- Address book
- Areas to avoid
- Previous points
- Route guidance
- Route trace
- Phonebook data
- Call history data
- Speed dial data
- Bluetooth® phone data
- Phone sound settings
- Phone display settings
- Message settings
- Audio/video setting
- Bluetooth® audio setting
- Startup image data
- Screen off image data
- Downloaded Apps

#### INFORMATION

- This function is not available while driving.

# 2. VOICE SETTINGS

Voice guidance etc. can be set.


- 1 Press the "SETUP" button.



- 2 Touch "Voice".





- 3 Touch the items to be set.

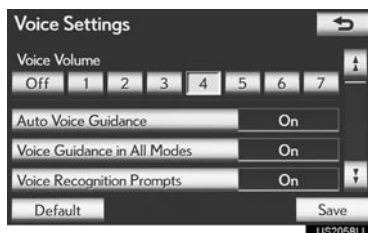

- 4 Touch "Save".

## SCREEN FOR VOICE SETTINGS

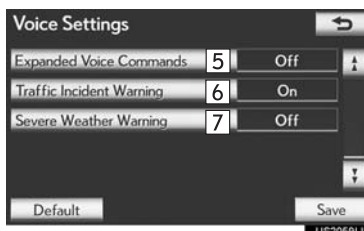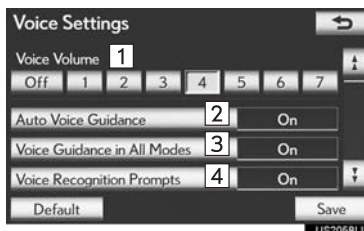


- On this screen, the following functions can be performed:

No.	Function
1	The voice guidance volume can be adjusted or switched off. (See "VOICE VOLUME" on page 57.)
2	Voice guidance during route guidance can be set to "On" or "Off".
3	Voice guidance during audio/video and/or air conditioning system use can be set to "On" or "Off".
4	Voice recognition prompts can be set to "On" or "Off". This setting can also be changed on the "Shortcut Menu" screen. (See page 298.)
5	When "On" is selected, the audio/video and air conditioning systems can be operated using voice commands.
6	When using the traffic information function, voice guidance can be set to "On" or "Off". (See "TRAFFIC INCIDENT WARNING" on page 58.)
7	When using the XM NavWeather™ function, the severe weather warning can be set to "On" or "Off".

## VOICE VOLUME

The voice guidance volume can be adjusted or switched off.

- 1 Press the "SETUP" button.
- 2 Touch "Voice" on the "Setup" screen.
- 3 Select the desired level by touching the appropriate number.

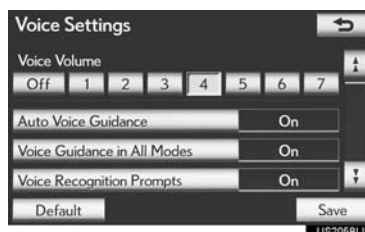


- If voice guidance is not needed, touch "Off" to disable the feature.
- 4 Touch "Save".

- To reset all setup items, touch "Default".

## TRAFFIC INCIDENT WARNING

Traffic congestion information can be received via voice guidance while being guided to the desired destination.

- 1 Press the **“SETUP”** button.
- 2 Touch **“Voice”** on the “Setup” screen.
- 3 Touch **“On”** of “Traffic Incident Warning”.

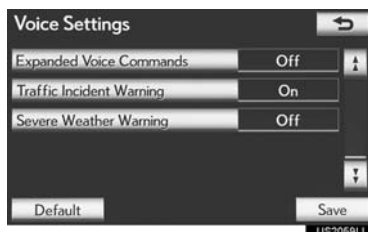

- 4 Touch **“Save”**.

### INFORMATION

- When the **“Traffic Information”** indicator is dimmed, “Avoid Traffic”, “Traffic Incident Warning” and “Show Free Flowing Traffic” will not operate. (See page 331.)

